

Unit 1 B, 89 Ellice Road, Wairau Valley
Auckland
www.ebuilt.co.nz

VENTIA METAL with Drainage Mat.

Roof Installation Procedure

Version No. 2
January 2025




Ventia Metal Underlay should be placed directly on clean and dry plywood sarking or OSB panels.



The underlay is fastened to the boarding with roofing staples.
Ventia metal Underlay should be laid with a minimum overlap of 150mm.



It is recommended the use of a double-sided adhesive tape or glue to seal the overlap.

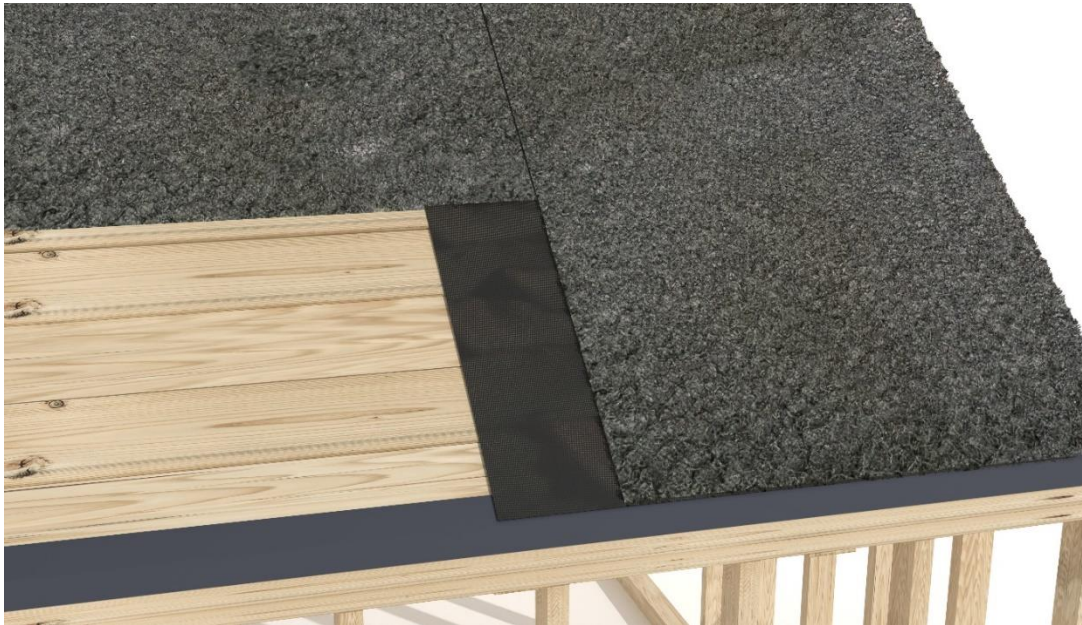

Any vertical joints of two membranes must have a minimum overlap of 200mm. Remove accordingly the drainage layer along the entire width from one of the membranes allowing the section to meet the required minimum overlap of 200mm and to be glued together.



Once Ventia Metal Underlay has been installed and secured, the installation of the metal cladding can proceed. Ventilation is required from the eaves to the ridge for all situations.